ThinkWise

Installation Manual

Model No. : S100

Desk Clamp

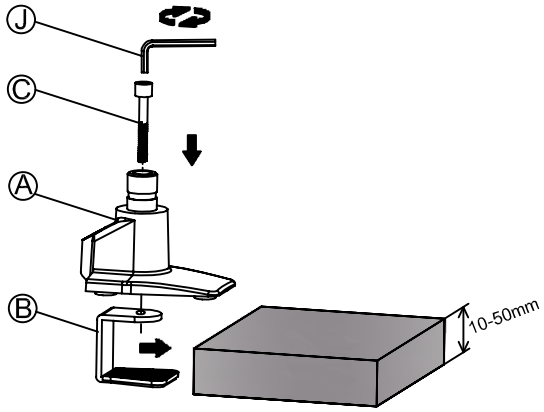

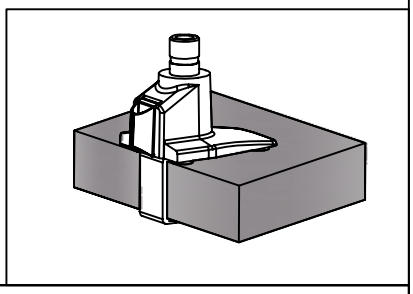

Grommet Hole

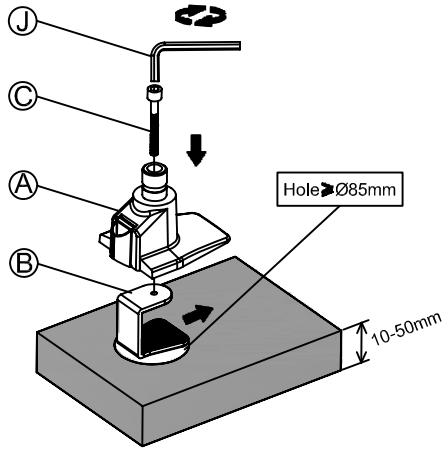

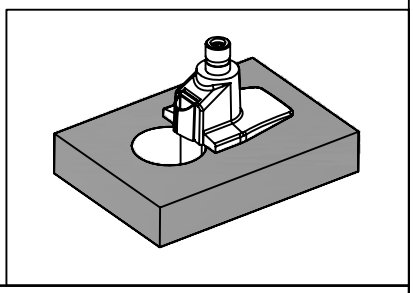

Thru-Desk

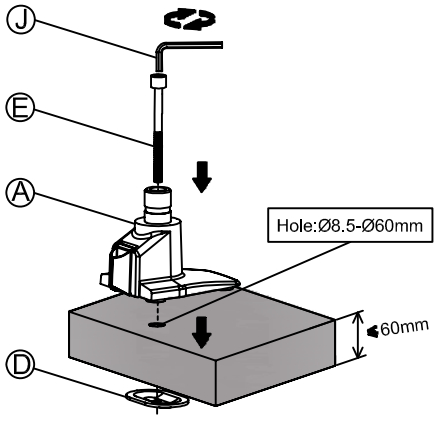

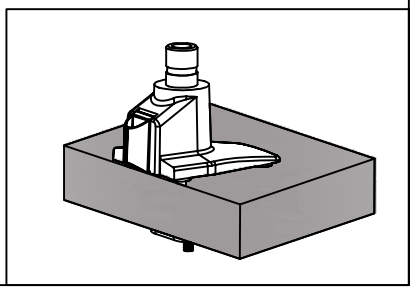

Shanghai ThinkWise Industrial Co.,Ltd
www.lcdarms.com.cn

ThinkWise

Installation Manual

Model No. : S100

1

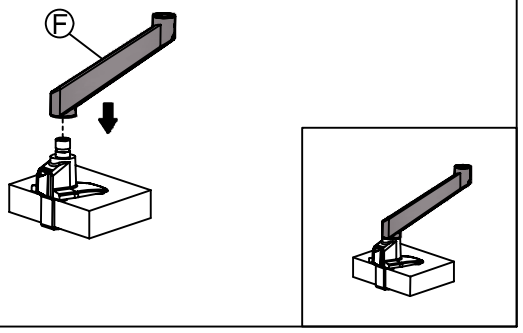

2

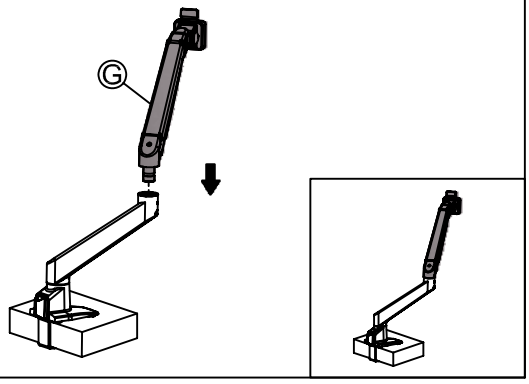

3

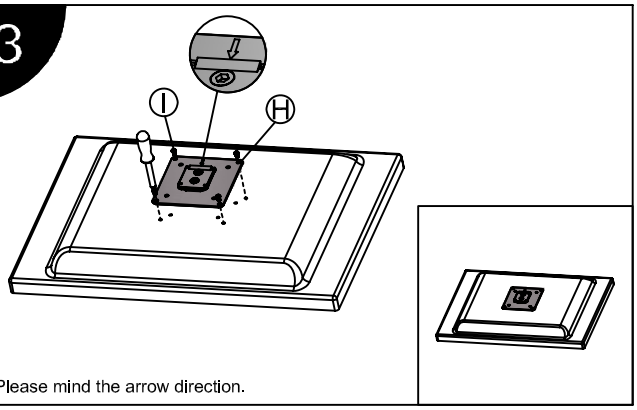

• Please mind the arrow direction.

4

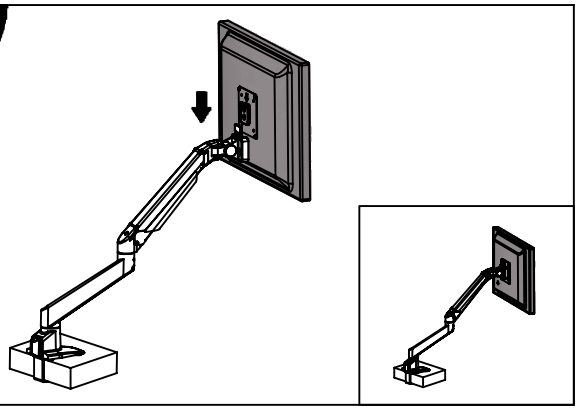

5

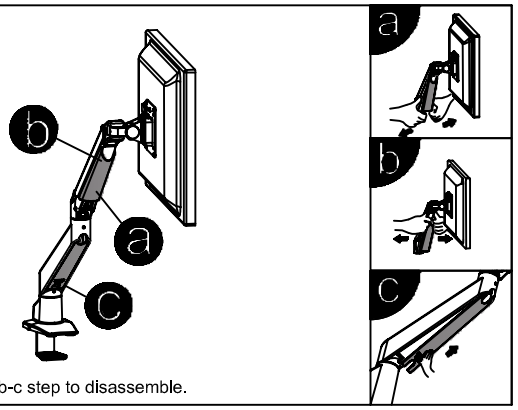

• Please follow a-b-c step to disassemble.

6

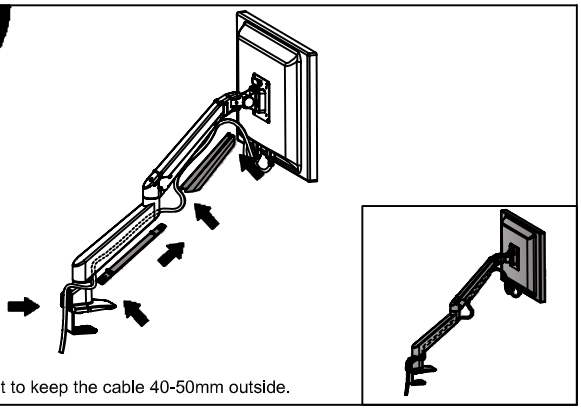

• Suggest to keep the cable 40-50mm outside.

7

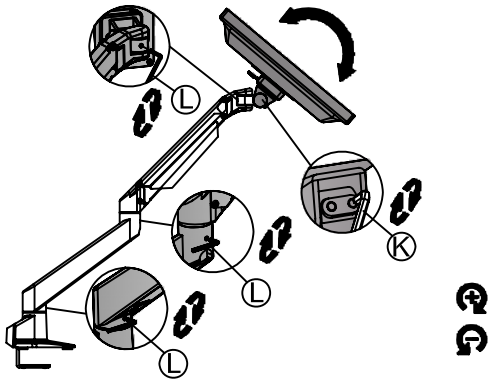

8

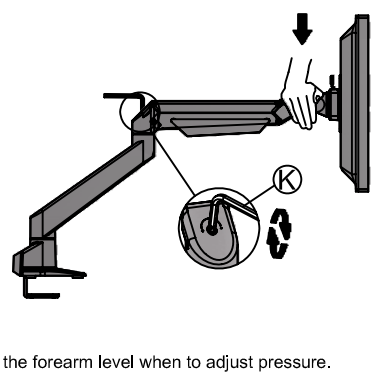

• Please keep the forearm level when to adjust pressure.

Shanghai ThinkWise Industrial Co.,Ltd
www.lcdarms.com.cn

ThinkWise

Installation Manual

Model No. : S100

Parts list

No.	ITEM	SPECS	QUANTITY
A	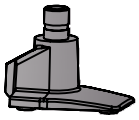		1
B			1
C		M8*90	1
D			1
E		M8*160	1
F			1
G			1
H			1
I		M4*12	4
J		M6	1
K		M4	1
L		M3	1